

INDUSTRIAL PRODUCTS

SMARTVALVE CUSTOM TABLES PROGRAMMING KIT INSTRUCTIONS

This kit allows you to specify custom pressure tables and add them to the memory of the SmartValve. The software in this kit will not change the SmartValve's factory-programmed pressure tables.

NOTE

The SmartValve Custom Tables Programming Kit requires a knowledge of computers, MicroSoft Windows® operating system, installing software, and handling microprocessor based products.

Kit Contents: Programming cable, diskette containing SmartValve Link software.

Computer Requirements: Windows 95/NT or compatible operating system, 1MB of available hard-disk space, available 9-pin male serial port.


INSTALLATION

1. Connect the programming cable to an available 9-pin male serial port on the computer.

CAUTION

Electrostatic discharge can damage the circuit board. Avoid excessive handling and, if possible, wear an anti-static wrist strap.

- Carefully remove the cover of the SmartValve to gain access to the circuit board.
- 3. Connect the other end of the programming cable to the SmartValve circuit board connector (as shown).

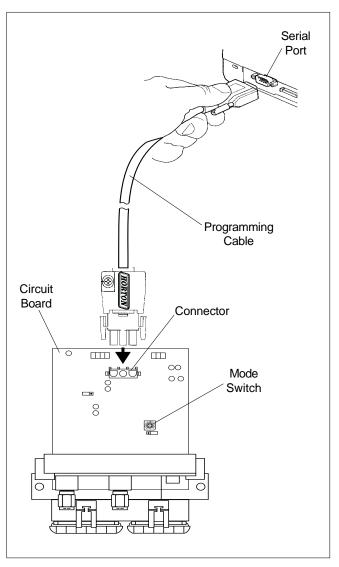

The SmartValve must be powered up before programming the cutom tables.

- Insert diskette into the computer's floppy drive. 1.
- 2. Select RUN from the Windows START menu.
- 3. Click on BROWSE; locate the floppy drive directory and open the file SETUP.EXE.
- Click OK at the RUN pop-up window.

SOFTWARE OPERATION


Click on the SmartValve Link icon on the computer's desktop or from the START menu.

- NOTE -

A step-by-step tutorial, located in the HELP menu, is provided to explain how to use the SmartValve Link software. Please review the tutorial before attempting to program the SmartValve.

After programming, use the following chart to select the desired table:

Mode Switch Position	Custom Table
3	0
4	1
5	2
6	3
7	4

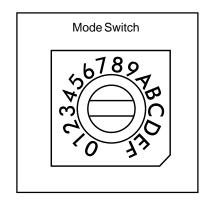

In accordance with Nexen's established policy of constant product improvement, the specifications contained in this manual are subject to change without notice. Technical data listed in this manual are based on the latest information available at the time of printing and are also subject to change without notice.

WARRANTY

Nexen Group, Inc. (Nexen) warrants its product(s) [the Product(s)] will be free from defects in materials and workmanship under normal use and service conditions for a period of 12 months from the date of shipment. NO OTHER WARRANTIES, WHETHER EXPRESS, IMPLIED, OR STATUTORY, INCLUDING WITHOUT LIMITATION WARRANTIES OF MERCHANTABILITY, OR OF FITNESS FOR A PARTICULAR PURPOSE, ARE GIVEN, AND ALL SUCH OTHER WARRANTIES ARE HEREBY EXPRESSLY DISCLAIMED.

Conditions

This warranty applies only if: (a) the Product has been installed, used, and maintained in accordance with any applicable Nexen installation or maintenance manual for the Product; (b) the alleged defect is not attributable to normal wear and tear; (c) the Product has not been altered, misused, or used for purposes other than those for which it was intended; and (d) the claimant has complied with the warranty claim procedures set out below in Warranty Claim Procedures.

Exclusive Remedy

The sole and exclusive remedy for a breach of this warrant shall be, at Nexen's sole election, repair or replacement with new, serviceably used or reconditioned Product, or issuance of a credit in the amount of the current Nexen discounted price for the Product.

Limitation of Damages

In no event shall Nexen be liable for any consequential, indirect, incidental, or special damages of any nature whatsoever, including without limitation, lost profits arising from the sale or use of the Products.

Warranty Claim Procedures

To make a claim under this warranty, the claimant must give written notice of the alleged defect to Nexen and deliver the Product to Nexen within one year of the date on which the alleged defect first became apparent.

> Nexen Group, Inc. 560 Oak Grove Parkway Vadnais Heights, MN 55127 800-843-7445 In MN: (651) 484-5900 Fax: (651) 286-1099

www.nexengroup.com

ISO 9001 Certified