




Clutch and Pilot Assembly

Models DPC-13T and DPC-15T

In accordance with Nexen's established policy of constant product improvement, the specifications contained in this manual are subject to change without notice. Technical data listed in this manual are based on the latest information available at the time of printing and are also subject to change without notice.

Technical Support: 800-843-7445
(651) 484-5900

www.nexengroup.com

	<div data-bbox="620 558 915 611"> DANGER</div> <p>Read this manual carefully before installation and operation. Follow Nexen's instructions and integrate this unit into your system with care. This unit should be installed, operated and maintained by qualified personnel ONLY. Improper installation can damage your system, cause injury or death. Comply with all applicable codes.</p>	
---	---	---

This document is the original, non-translated, version.

Conformity Declaration: In accordance with Appendix II B of CE Machinery Directive (2006/42/EC):

A Declaration of Incorporation of Partly Completed Machinery evaluation for the applicable EU directives was carried out for this product in accordance with the Machinery Directive. The declaration of incorporation is set out in writing in a separate document and can be requested if required.

This machinery is incomplete and must not be put into service until the machinery into which it is to be incorporated has been declared in conformity with the applicable provisions of the Directive.

Nexen Group, Inc.
560 Oak Grove Parkway
Vadnais Heights, Minnesota 55127

ISO 9001 Certified

Copyright 2014 Nexen Group, Inc.


TABLE OF CONTENTS

General Specifications	4
General Safety Precautions	4
Introduction	5
Installation	5
Lubrication	8
Air Connections	9
Operation	11
Parts Replacement	12
Replacement Parts	15
Warranty	16

GENERAL SPECIFICATIONS


Specifications:	
Torque	Up to 4067 Nm (36000 in-lbs)
Actuation Pressure	1 - 5.5 bar (14.5 - 80 psi)
Service Temperature	4.5 - 104 C (40 - 220 F)
Approximate Weight	Up to 115 kg (254 lbs)

GENERAL SAFETY PRECAUTIONS




CAUTION

Use lifting aids and proper lifting techniques when installing, removing, or placing this product in service.




CAUTION

Use appropriate guarding for moving components. Failure to guard could result in serious bodily injury.




CAUTION

Watch for sharp features when interacting with this product. The parts have complex shapes and machined edges.




CAUTION

This product has possible pinch points. Care should be taken when interacting with this product.




WARNING


Ensure proper guarding of the product is used. Nexen recommends the machine builder design guarding in compliance with OSHA 29 CFR 1910 "Occupational Safety and Health Hazards".



WARNING


This product is capable of emitting a spark if misused therefore is not recommended for use in any explosive environment.

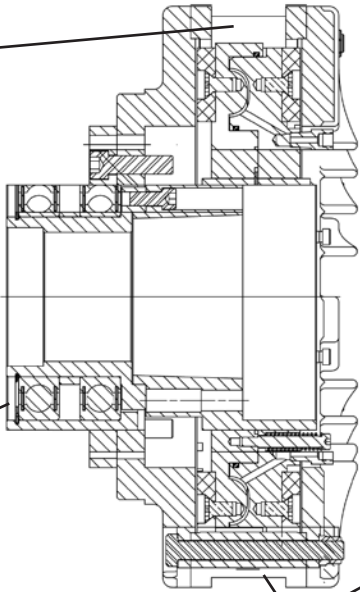




CAUTION

Surface temperature may exceed safe handling limits during operation. Do not touch.



CAUTION

Use appropriate guarding for moving components. Failure to guard could result in serious bodily injury.



CAUTION

This product has possible pinch points. Care should be taken when interacting with this product.

INTRODUCTION

Nexen's modularized DPC (Dual Friction Plate) Clutches are designed to mount on shaft ends, or on through shafts using customer supplied Q.D. (Quick Detachable) Bushings. The dual friction plate design eliminates thrust loading of bearings when the DPC Clutch is connected to the Pilot Assembly, or a bearing supported Flywheel, Sheave, or Sprocket.

Seven components are combined to install Nexen's DPC Clutch as an Element Clutch, Pilot Mount Clutch, or a Sheave Clutch.

The seven basic components (each sold separately) are: DPC Clutch, Q.D. Bushing (customer supplied), Rotary Air Union (supplied with DPC Clutch), Rotary Air Union Cap, Sheave, Pilot Assembly, and Bushing.

The inner and outer assemblies of the DPC Clutch rotate independently.

When mounted on a through shaft, the outer clutch assembly rotates, and upon engagement, the inner clutch assembly becomes the driven member.

When mounted on a continually running shaft, the inner clutch assembly rotates, and upon engagement, the outer clutch assembly becomes the driven member.

Nexen recommends mounting the DPC Clutch with the outer clutch assembly rotating continuously; taking advantage of the cooling effect of the fin to dissipate heat generated when the clutch is engaged.

INSTALLATION

NOTE: All DPC Clutch installations require a Q.D. (Quick Detachable) Bushing. Refer to Table 1 for Q.D. Bushing Specifications.

ELEMENT CLUTCH

Refer to Figures 1 & 2.

1. Remove Lock Nuts (Item 20).
2. Remove Friction Disc (Item 7), and Flange Mount Housing (Item 6) from Flange Mount Disc (Item 5).
3. Set DPC inner assembly aside.
4. Using Cap Screws (Item 21), attach Flange Mount Disc (Item 6) to bearing supported component. (See Table 2).
5. Tighten Cap Screws (Item 21) to recommended torque (See Table 3).
6. Thoroughly inspect the tapered bore of the Splined Hub (Item 1), and tapered surface of the Q.D. Bushing. Remove any dirt, grease, or foreign material.
7. Install Q.D. Bushing into Splined Hub (Item 1); aligning untapped holes in Q.D. Bushing with tapped holes in Splined Hub.

NOTE

Do not strike the Q.D. Bushing to set it in the tapered bore.

8. Loosely insert the Q.D. Bushing Pull-Up Bolts, and Lockwashers into the Q.D. Bushing, and the tapped holes of the Splined Hub.

TABLE 1

MODEL	BUSHING TYPE	MAXIMUM BORE	PULL-UP BOLT TIGHTENING TORQUE
DPC-13T	F	3.500	75 FT. LBS.
DPC-15T	J	4.000	112 FT. LBS.

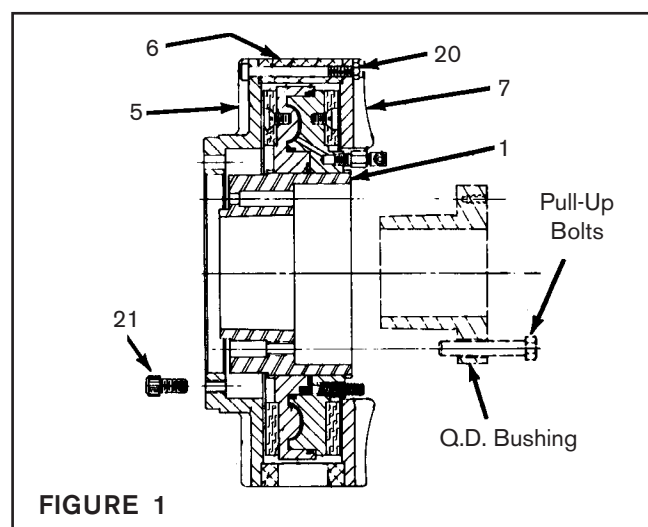


FIGURE 1

TABLE 2

MODEL	BOLT CIRCLE	BOLT HOLES
DPC-13T	8.250" [209.55 mm]	6 Equally Spaced
DPC-15T	9.00" [228.60 mm]	6 Equally Spaced

INSTALLATION (continued)

NOTE: Do not use lubricants or thread locking compounds on Pull-Up Bolts.

9. Using a Dial Indicator, measure runout of motor shaft. Runout must not exceed 0.002 T.I.R. (Total Indicated Reading).
10. Insert Key into motor shaft keyway.
11. Slide the DPC Clutch inner assembly onto the motor shaft.

NOTE

There must be a gap of approximately 1/32" between the Friction Facing (Item 4), and the friction surface of the Flange Mount Disc (Item 5). To obtain this 1/32" gap; insert three equally spaced 1/32" shims between the Friction Facing and the Friction surface of the Flange Mount Disc, and clamp the DPC inner assembly, and the Flange Mount Disc together at each shim location.

12. Alternately, and evenly, tighten Q.D. Bushing Pull-Up Bolts to the recommended torque (See Table 3).

NOTE

To avoid preloading of the bearings; the motor shaft must be free to "float" when tightening the Q.D. Bushing Pull-Up Bolts.

NOTE

Runout is minimized if a Dial Indicator is used as the Q.D. Bushing Pull-Up Bolts are tightened. Place the contact tip of the Dial Indicator on the machined surface of the Splined Hub to measure runout. Runout at this surface must be within 0.003 T.I.R when the Pull-Up Bolts are tightened.

NOTE

Do not over tighten Pull-Up Bolts. If excessive tightening torque is applied; bursting pressure is created in the Splined Hub.

13. Remove all shims and clamps.
14. Install the Housing (Item 6), and Friction Disc (Item 7), and secure them with Lock Nuts (Item 20).
15. Tighten the Lock Nuts (Item 20) to the recommended torque (See Table 3).

TABLE 3

DESCRIPTION	DPC-13T	DPC-15T
Cap Screw (Item 21)	119 FT. LBS.	119 FT. LBS.
Lock Nut (Item 20)	70 FT. LBS.	70 FT. LBS.
Pull-Up Bolts	75 FT. LBS.	112 FT. LBS.

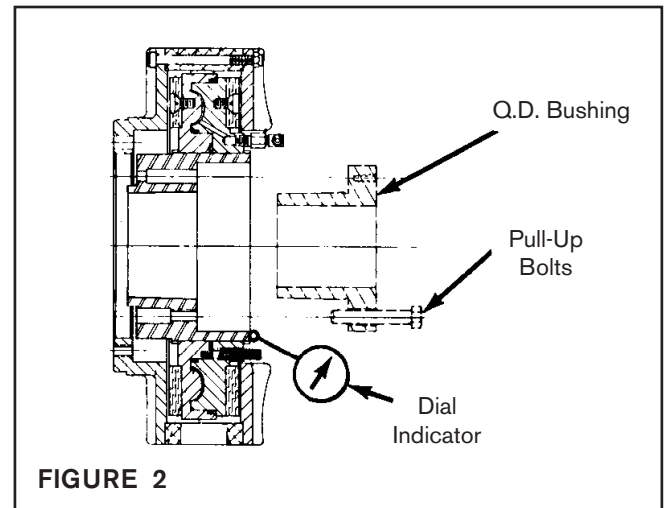


FIGURE 2

INSTALLATION (continued)

PILOT CLUTCH

Refer to Figures 3 & 4.

NOTE: The Pilot Clutch is a combination of the Element Clutch and a Pilot Assembly.

1. Install Support Bushing, if required.

NOTE: The Support Bushing provides radial load support at the shaft, and is used when bore sizes smaller than standard are required.

- a. Place Pilot Assembly face down, and fully support the flange of the Extension Hub (Item 22).
- b. Insert the Support Bushing into the bore of the Extension Hub (Item 22).
- c. Apply even pressure around the entire diameter of the Support Bushing, and press the Support Bushing into the Extension Hub.

NOTE: Do not use a hammer to install the Support Bushing; a small Arbor Press is recommended.

2. Push the Pilot Assembly into the Element Clutch, and align the counterbored holes in the Pilot Housing (Item 23) with the tapped holes in the Flange Mount Disc (Item 5).
3. Install the Cap Screws (Item 21), and tighten them to the recommended torque (See Table 4).
4. Align the counterbored holes of the Splined Hub (Item 1) with the tapped holes of the Hub Extension (Item 22).
5. Install Cap Screw (Item 28), and tighten them to the recommended torque (See Table 4).

6. Thoroughly inspect the tapered bore of the Splined Hub, and the tapered surface of the Q.D. Bushing; remove any dirt, grease, or foreign material.

NOTE: Do not use lubricants when installing the Q.D. Bushing.

7. Install the Q.D. Bushing into the Splined Hub; aligning the untapped holes in the Q.D. Bushing with the tapped holes in the Splined Hub.

NOTE

Do not strike the Q.D. Bushing to "set" it in the tapered bore.

8. Loosely insert the Pull-Up Bolts, and Lockwashers into the Q.D. Bushing, and tapped holes of the Splined Hub.

NOTE: Do not use lubricants or thread locking compounds on the Pull-Up Bolts.

9. Measure the motor shaft runout. The runout must not exceed 0.002 T.I.R. (Total Indicator Reading).
10. Insert Key into keyway.
11. Slide "DPC" Pilot Clutch onto the motor shaft.

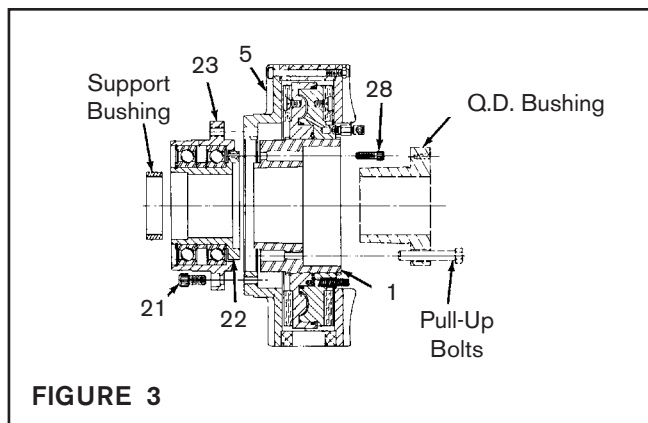


FIGURE 3

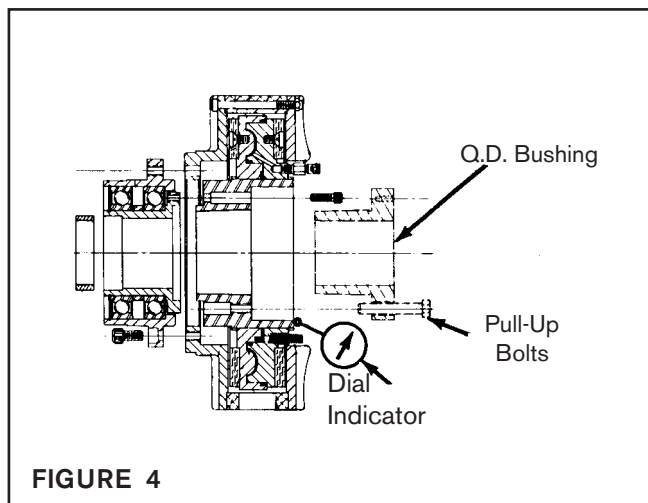


FIGURE 4

TABLE 4

DESCRIPTION	DPC-13T	DPC-15T
Cap Screw (Item 21)	119 FT. LBS.	119 FT. LBS.
Cap Screw (Item 28)	48 FT. LBS.	48 FT. LBS.
Lock Nut (Item 20)	70 FT. LBS.	70 FT. LBS.
Pull-Up Bolts	75 FT. LBS.	112 FT. LBS.

12. Alternately, and evenly tighten Pull-Up Bolts to the recommended torque (See Table 4).

NOTE

Do not over tighten Pull-Up Bolts. If excessive tightening torque is applied, bursting pressure is created in the Splined Hub.

NOTE: Runout is minimized if a Dial Indicator is used as the Q.D. Bushing Pull-Up Bolts are tightened. Place the contact tip of the Dial Indicator on the machined surface of the Splined Hub to measure runout. Runout on this surface must be within 0.003 T.I.R. when the Pull-Up Bolts are tightened.

INSTALLATION (continued)

SHEAVE CLUTCH

Refer to Figure 5.

NOTE: The Sheave Clutch is a combination of the Element Clutch, Pilot Assembly, and Sheave.

1. Proceed with Steps 1 through 5 for the Pilot Clutch installation.
2. Slide the Sheave (Item 32) onto the Pilot Assembly.
3. Align the sheave mounting holes with the tapped holes in the Pilot Housing (item 23).
4. Using Cap Screws (Item 33), and Lockwashers (Item 34), secure the Sheave onto the Pilot Assembly.
5. Tighten the Cap Screws (Item 33) to the recommended torque (See Table 5).
6. Proceed with Steps 6 through 12, for the Pilot Clutch installation.

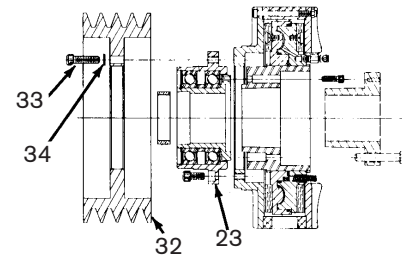


FIGURE 5

TABLE 5

DESCRIPTION	DPC-13T	DPC-15T
Cap Screw (Item 21)	119 FT. LBS.	119 FT. LBS.
Cap Screw (Item 28)	48 FT. LBS.	48 FT. LBS.
Cap Screw (Item 33)	119 FT. LBS.	119 FT. LBS.
Lock Nut (Item 20)	70 FT. LBS.	70 FT. LBS.
Pull-UP Bolts	75 FT. LBS.	112 FT. LBS.

LUBRICATION

NOTE

Nexen pneumatically actuated devices require clean, pressure regulated air for maximum performance and life. All seals in Nexen pneumatically operated devices are lubricated for life, and do not require additional lubrication.

However, some customers prefer to use an air line lubricator, which injects oil into the pressurized air, forcing an oil mist into the air chamber. This is acceptable, but care must be taken to ensure once an air mist lubrication system is used, it is continually used over the life of the product as the oil mist may wash free the factory installed lubrication.

Locate the lubricator above and within ten feet of the product, and use low viscosity oil such as SAE-10.

Synthetic lubricants are not recommended.

Nexen product's bearings are shielded and pre-lubricated, and require no further lubrication.

LUBRICATOR DRIP RATE SETTINGS

CAUTION

These settings are for Nexen supplied lubricators. If you are not using a Nexen lubricator, calibration must follow the manufacturer's suggested procedure.

1. Close and disconnect the air line from the unit.
2. Turn the Lubricator Adjustment Knob counterclockwise three complete turns.
3. Open the air line.
4. Close the air line to the unit when a drop of oil forms in the Lubricator Sight Gage.
5. Connect the air line to the unit.
6. Turn the Lubricator Adjustment Knob clockwise until closed.
7. Turn the Lubricator Adjustment Knob counterclockwise one-third turn.
8. Open the air line to the unit.

AIR CONNECTIONS

All Nexen pneumatically actuated devices require clean and dry air, which meet or exceeds ISO 8573.1:2001 Class 4.4.3 quality.

NOTE

For quick response, Nexen recommends a quick exhaust valve and short air lines between the Control Valves and the product. Align the air inlet ports to a down position to allow condensation to drain out of the air chambers of the product.



CAUTION

Low air pressure will cause slippage and overheating. Excessive air pressure will cause abrupt starts and stops, reducing product life.

SHAFT END MOUNTING

Refer to Figure 6.

1. Install two Elbow Fittings (Item 17) into the Rotary Air Union Cap (Item 30).
2. Install an Adaptor Fitting (Item 16), and an Elbow Fitting (Item 17) into each air inlet of the Piston/Drive Disc.
3. Using Cap Screws (Item 31), attach the Rotary Air Union Cap (Item 30) to the tapped holes of the Q.D. Bushing.

NOTE: The Rotary Air Union Cap air outlets must be aligned at approximately $82\frac{1}{2}^{\circ}$ to the Piston/Drive Disc air inlets for proper Hose (Item 18) connection.

4. Tighten the Cap Screws (Item 31) to the recommended torque (See Table 6).
5. Install Hoses (Item 18).
6. Install the Rotary Air Union (Item 15).
7. Connect the air supply to the Rotary Air Union.

NOTE: Do not use rigid pipe or tubing for this connection. For fast engagement, and disengagement, connect the air controls as close to the "DPC" Clutch as possible. Where long air lines are required, use a Quick Exhaust Valve.

The following is a common air supply scheme used with this product. This is an example and not an all-inclusive list. All air circuits to be used with this product must be designed following ISO 4414 guidelines.

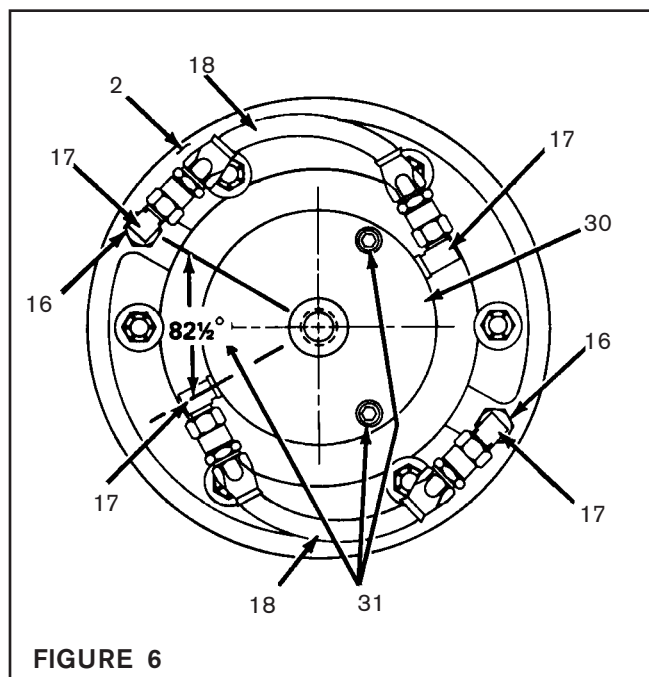
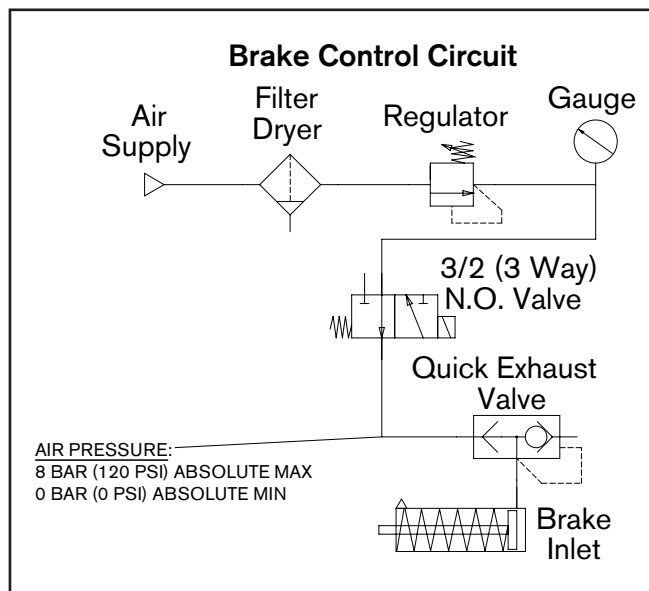


TABLE 6

DESCRIPTION	DPC-13T	DPC-15T
Cap Screw (Item 31)	75 FT. LBS.	112 FT. LBS.

AIR CONNECTIONS (continued)

THROUGH SHAFT MOUNTING

Refer to Figure 7.

1. Drill a $\frac{3}{8}$ " diameter hole into the center of the shaft; deep enough to reach the desired air outlets.

NOTE: Air outlets should be approximately $\frac{3}{8}$ " from the end of the Hub.

2. Tap the end of the Shaft 5/8-18 by 5/8" deep.
3. Drill a $1\frac{1}{32}$ " diameter air outlet hole through the Shaft; intersecting the air inlet hole approximately $\frac{3}{8}$ " from the end of the Hub.
4. Tap both air holes 1/8-27 NPT by 5/8" deep.
5. Install two Elbow Fittings (Item 17) into each air outlet hole.
6. Install an Adaptor Fitting (Item 16), and an Elbow Fitting (Item 17) into each air inlet of the Piston/Drive Disc (Item 2).
7. Install Hoses (Item 18).
8. Install the Rotary Air Union (Item 15).
9. Connect the air supply to the Rotary Air Union.

NOTE: Do not use rigid pipe or tubing for this connection. For fast engagement, and disengagement, connect the air controls as close to the "DPC" Clutch as possible. Where long air lines are required, use a Quick Exhaust Valve.

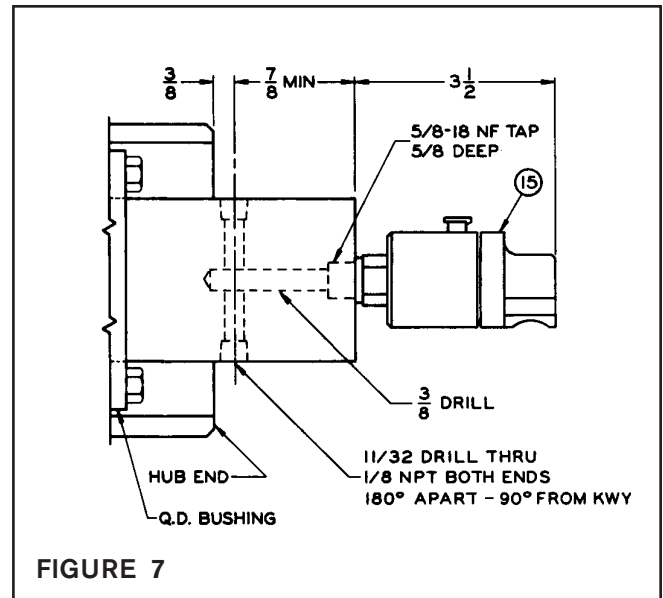


FIGURE 7

OPERATION



CAUTION

Never exceed life of facing material. Facing life depends on the volume of material and the total energy over the life of the unit. Expected life (in hrs) can be found by: $\text{Time} = \text{Volume} / (\text{Power} * \text{Wear Rate})$.



CAUTION

The temperature limits for this product line are 4.5-104 Degree Celsius (40-220 Degree F).



CAUTION

Prior to placing the DPC Clutch into service; verify that all screws are secured to the proper tightening torque (See Table 7).

The DPC Clutch engages when air pressure is introduced into the Cylinder/Drive Disc. Air pressure pushes the Cylinder/Drive Disc against the Flange Mount Disc, and forces the Piston/Drive Disc in the opposite direction.

Torque is transmitted through the Cylinder/Drive Disc and Piston/Drive Disc splines to the Splined Hub attached to the shaft with Q.D. Bushings.

Heat generated at the friction surfaces is dissipated by windage created by fins on the Flange Mount Disc, and Friction Disc.

When air is exhausted from the Cylinder, Return Springs pull the Piston to a disengaged position.



CAUTION

Never exceed recommended operating speeds (See Table 8).



WARNING

Ensure proper guarding of the product is used. Nexen recommends the machine builder design guarding in compliance with OSHA 29 CFR 1910 "Occupational Safety and Health Hazards".


TABLE 7

DESCRIPTION	DPC-13T	DPC-15T
Shoulder Screw (Item 13)	9 FT. LBS.	9 FT. LBS.
Cap Screw (Item 21)	119 FT. LBS.	119 FT. LBS.
Cap Screw (Item 28)	48 FT. LBS.	48 FT. LBS.
Cap Screw (Item 31)	75 FT. LBS.	112 FT. LBS.
Cap Screw (Item 33)	119 FT. LBS.	119 FT. LBS.
Lock Nut (Item 20)	70 FT. LBS.	70 FT. LBS.
Pull-UP Bolts	75 FT. LBS.	112 FT. LBS.

TABLE 8

MODEL	OUTER ASSEMBLY	INNER ASSEMBLY
DPC-13T	1200 R.P.M.	2000 R.P.M.
DPC-15T	900 R.P.M.	1700 R.P.M.

PARTS REPLACEMENT



CAUTION

The Nexen DPC Clutch has been balanced at the factory. During disassembly, mark the components with chalk alignment marks to insure correct alignment and balance as the DPC Clutch is reassembled (See Fig. 8).

When reassembling the Nexen DPC Clutch, make sure that all screws are tightened to the recommended torque (See Table 9).

FRICITION FACING (ITEM 4).


Refer to Figure 9.

NOTE: Inspect Friction Facings for wear; and replace them when they are approximately 9/32" thick. Friction Facings can be replaced without removing the DPC Clutch from the motor shaft.

1. Disconnect the air supply line, and Hose Assemblies at the Piston/Drive Disc Elbow Fittings.

NOTE: If the DPC Clutch is shaft end mounted, remove the Rotary Air Union End Cap (Item 30); on through shaft installations, remove Elbow Fittings (Item 17) from the shaft.

2. Remove Lock Nuts (Item 20).
3. Remove the Friction Disc (Item 7).
4. Remove the Shoulder Screws (Item 13), and Springs (Item 14).
5. Slide the Piston/Drive Disc (Item 2) off the Splined Hub (Item 1).



CAUTION

Working with spring loaded or tension loaded fasteners and devices can cause injury. Wear safety glasses and take the appropriate safety precautions.

6. Remove the Retaining Ring (Item 10).
7. Slide the Cylinder/Drive Disc (Item 3) off the Splined Hub (Item 1).
8. Remove Machine Screws (Item 11), and replace worn Friction Facings (Item 4).

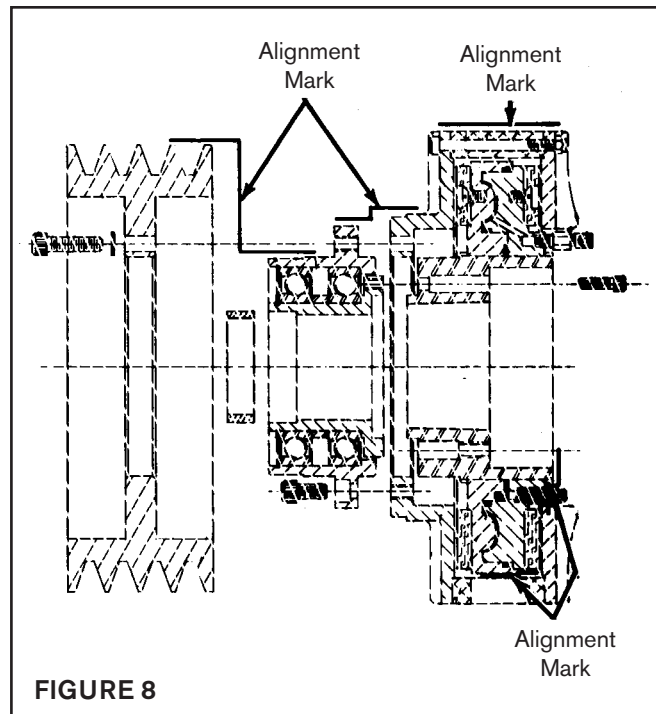


FIGURE 8

TABLE 9

DESCRIPTION	DPC-13T	DPC-15T
Shoulder Screw (Item 13)	9 FT. LBS.	9 FT. LBS.
Cap Screw (Item 21)	119 FT. LBS.	119 FT. LBS.
Cap Screw (Item 28)	48 FT. LBS.	48 FT. LBS.
Cap Screw (Item 31)	75 FT. LBS.	112 FT. LBS.
Cap Screw (Item 33)	119 FT. LBS.	119 FT. LBS.
Lock Nut (Item 20)	70 FT. LBS.	70 FT. LBS.
Pull-UP Bolts	75 FT. LBS.	112 FT. LBS.

PARTS REPLACEMENT (continued)

NOTE: On some models of the DPC-13T and DPC-15T the Machine Screws (Item 11) are assembled with a green anaerobic thread locking compound. If removal is difficult, strike the end of the screwdriver with a hammer to break the crystalline structure of this thread locking compound before attempting to remove the machine screws. The Machine Screws (Item 11) furnished with the new Friction Facings have a locking patch and do not require the use of a thread locking compound.

9. Reverse Steps 1 through 7 to reassemble the DPC Clutch; noting all chalk alignment marks, and tighten all screws to the recommended torque (See Table 9).

O-RINGS (ITEMS 8 & 9)

Refer to Figure 10.

NOTE: Replace O-Rings (Items 8 & 9) if there are noticeable air leaks or a loss of torque.

1. Proceed with Steps 1 through 7 for Friction Facing Replacement.
2. Remove old O-Rings (Items 8 & 9) and clean O-Ring contact surfaces with fresh safety solvent.
3. Lubricate new O-Rings (Items 8 & 9), and O-Ring contact surfaces with fresh O-Ring lubricant.
4. Install new O-Rings (Items 8 & 9).
5. Reverse Step 1 to reassemble the DPC Clutch, noting the chalk alignment marks, and tighten all screws to the recommended torque (See Table 9).

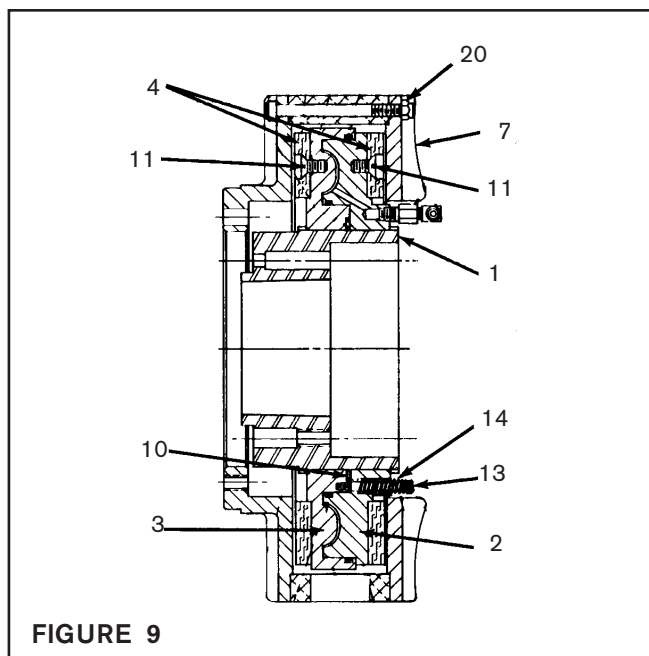


FIGURE 9

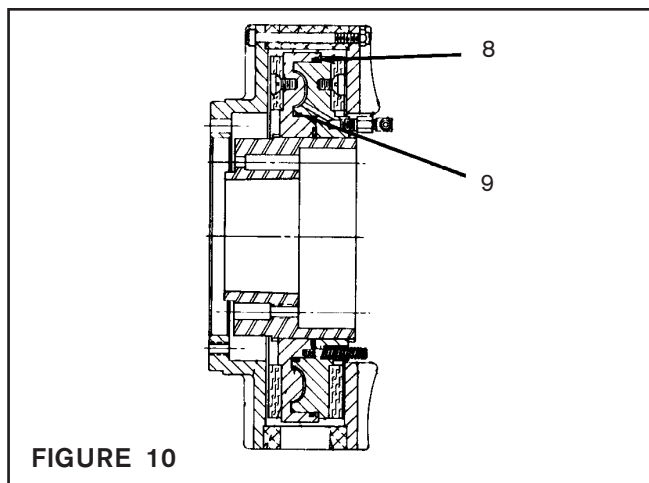


FIGURE 10

PARTS REPLACEMENT (continued)

PILOT ASSEMBLY BEARINGS (ITEM 25).

Refer to Figure 11.

NOTE: DPC Clutch Pilot Assembly Bearings (Item 25) are prelubricated, sealed, and do not require further lubrication.

1. Disconnect the air supply line, and Hose Assemblies at the Piston/Drive Disc Elbow Fittings.

NOTE: If the DPC Clutch is shaft end mounted, remove the Rotary Air Union Cap (Item 30). On through shaft installations, remove the Elbow Fittings (Item 17) from the shaft.

2. Loosen the Q.D. Bushing.
 - a. Remove Q.D. Bushing pull-up bolts and lockwashers.
 - b. Insert the pull-up bolts into the tapped Q.D. Bushing removal holes, and progressively tighten each one until the Splined Hub (Item 1) is loose on the Q.D. Bushing.
3. Wedge a screwdriver into the saw cut in the Q.D. Bushing to loosen the Q.D. Bushing from the shaft, then remove the DPC Clutch.
4. Remove the Cap Screws (Item 33), Lockwashers (Item 34), and Sheave (Item 32) if mounted to the DPC Clutch.
5. Remove Cap Screws (Item 28).
6. Remove Cap Screws (Item 21).
7. Remove the Pilot Assembly from the Element Clutch.



CAUTION

Working with spring loaded or tension loaded fasteners and devices can cause injury. Wear safety glasses and take the appropriate safety precautions.

8. Remove Retaining Ring (Item 27) from the Pilot Assembly.
9. Fully supporting the Pilot Housing (Item 32); press the Hub Extension (Item 22) out of the Pilot Assembly.

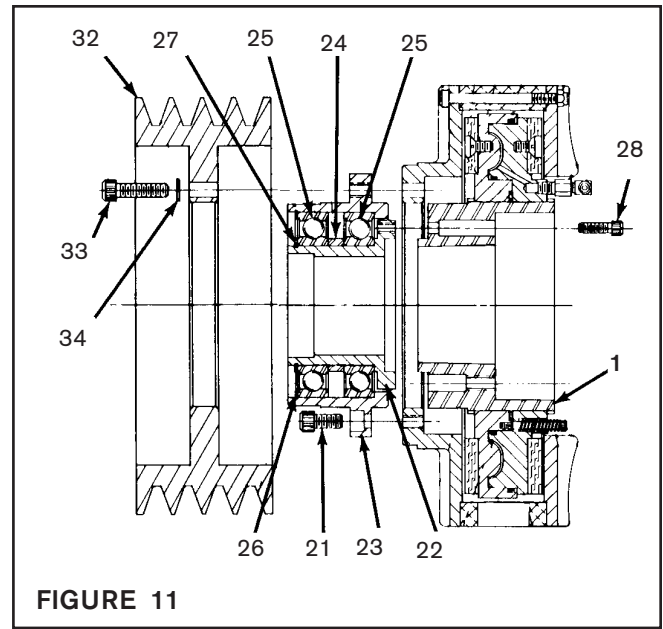


FIGURE 11

10. Remove Retaining Ring (Item 26).
11. Fully supporting the Pilot Housing (Item 23); push out the Bearings (Item 25), and Spacer (Item 24).
12. Clean bearing contact surfaces of the Pilot Housing (Item 23), and the Hub Extension (Item 22) with fresh safety solvent.
13. Press first new Bearing (Item 25) onto Hub Extension (Item 22).
14. Install the Spacer (Item 24).
15. Press the second Bearing (Item 25) onto the Hub Extension (Item 22).
16. Install Retaining Ring (Item 27).
17. Fully supporting the inner races of the new bearings; push the Hub Extension (Item 22), with Bearings (Item 25), and Spacer (Item 24) into the Pilot Housing (Item 23).
18. Install Retaining Ring (Item 26).
19. Reinstall DPC Clutch (See Installation section).

REPLACEMENT PARTS

The Item or "Balloon" Number for all Nexen Products is used for part identification on all Product Parts List, Product Price List, Unit Assembly Drawings, Bills of Materials, and Instruction Manuals.

When ordering replacement parts, specify model designation, item number, part description, and quantity. Purchase replacement parts through your local Nexen Distributor.

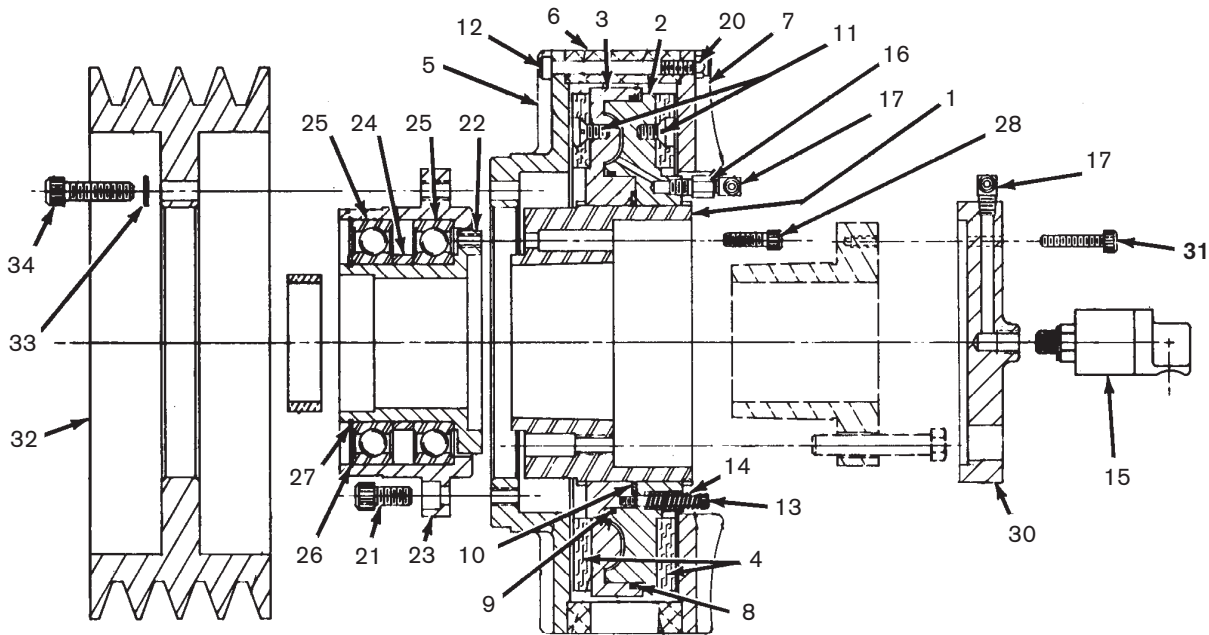


FIGURE 12

ELEMENT CLUTCH

ITEM	DESCRIPTION	QTY
1	Splined Hub	1
2	Piston/Drive Disc	1
3	Cylinder/Drive Disc	1
4	Friction Facing	2
5	Flange Mount Disc	1
6	Housing	1
7	Friction Disc	1
8	O-Ring (Large)	1
9	O-Ring (Small)	1
10	Retaining Ring	1
11	Machine Screw	16
12	Cap Screw	*
13	Shoulder Screw	**
14	Spring	**
15	Rotary Air Union	1
16	Adaptor Fitting	2
17	Elbow Fitting	4
18	Hose Assembly (Not Shown)	2
19	Hose Assembly (Not Shown)	1
20	Lock Nut	*
21	Cap Screw	6

MODEL	* QTY	** QTY
DPC-13T	8	8
DPC-15T	10	8

PILOT ASSEMBLY

ITEM	DESCRIPTION	QTY
22	Extension Hub	1
23	Pilot Housing	1
24	Spacer	1
25	Bearing	2
26	Retaining Ring	1
27	Retaining Ring	1
28	Cap Screw	3

CAP, ROTARY AIR UNION, & FASTENERS

ITEM	DESCRIPTION	QTY
30	Cap, Rotary Air Union	1
31	Cap Screw	3

SHEAVES & FASTENERS

ITEM	DESCRIPTION	QTY
32	Sheave	1
33	Cap Screw	6
34	Lockwasher	6

WARRANTY

Warranties

Nexen warrants that the Products will (a) be free from any defects in material or workmanship for a period of 12 months from the date of shipment, and (b) will meet and perform in accordance with the specifications in any engineering drawing specifically for the Product that is in Nexen's current product catalogue, or that is accessible at the Nexen website, or that is attached to this Quotation and that specifically refers to this Quotation by its number, subject in all cases to any limitations and exclusions set out in the drawing. NEXEN MAKES NO OTHER WARRANTY, EXPRESS OR IMPLIED, AND ALL IMPLIED WARRANTIES, INCLUDING WITHOUT LIMITATION, IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE HEREBY DISCLAIMED. This warranty applies only if: (a) the Product has been installed, used and maintained in accordance with any applicable Nexen installation or maintenance manual for the Product; (b) the alleged defect is not attributable to normal wear and tear; (c) the Product has not been altered, misused or used for purposes other than those for which it was intended; and (d) Buyer has given written notice of the alleged defect to Nexen, and delivered the allegedly defective Product to Nexen, within one year of the date of shipment.

Exclusive Remedy

The exclusive remedy for the Buyer for any breach of any warranties provided in connection with this agreement will be, at the election of Nexen: (a) repair or replacement with new, serviceably used, or reconditioned parts or products; or (b) issuance of credit in the amount of the purchase price paid to Nexen by the Buyer for the Products.

Agent's Authority

Buyer agrees that no agent, employee or representative of Nexen has authority to bind Nexen to any affirmation, representation, or warranty concerning the Products other than those warranties expressly set forth herein.

Limitation on Nexen's Liability

TO THE EXTENT PERMITTED BY LAW NEXEN SHALL HAVE NO LIABILITY TO BUYER OR ANY OTHER PERSON FOR INCIDENTAL DAMAGES, SPECIAL DAMAGES, CONSEQUENTIAL DAMAGES OR OTHER DAMAGES OF ANY KIND OR NATURE WHATSOEVER, WHETHER ARISING OUT OF BREACH OF WARRANTY OR OTHER BREACH OF CONTRACT, NEGLIGENCE OR OTHER TORT, OR OTHERWISE, EVEN IF NEXEN SHALL HAVE BEEN ADVISED OF THE POSSIBILITY OR LIKELIHOOD OF SUCH POTENTIAL LOSS OR DAMAGE. For all of the purposes hereof, the term "consequential damages" shall include lost profits, penalties, delay damages, liquidated damages or other damages and liabilities which Buyer shall be obligated to pay or which Buyer may incur based upon, related to or arising out of its contracts with its customers or other third parties. In no event shall Nexen be liable for any amount of damages in excess of amounts paid by Buyer for Products or services as to which a breach of contract has been determined to exist. The parties expressly agree that the price for the Products and the services was determined in consideration of the limitation on damages set forth herein and such limitation has been specifically bargained for and constitutes an agreed allocation of risk which shall survive the determination of any court of competent jurisdiction that any remedy herein fails of its essential purpose.

Inspection

Buyer shall inspect all shipments of Products upon arrival and shall notify Nexen in writing, of any shortages or other failures to conform to these terms and conditions which are reasonably discoverable upon arrival without opening any carton or box in which the Products are contained. Such notice shall be sent within 14 days following arrival. All notifications shall be accompanied by packing slips, inspection reports and other documents necessary to support Buyer's claims. In addition to the foregoing obligations, in the event that Buyer receives Products that Buyer did not order, Buyer shall return the erroneously shipped Products to Nexen within thirty (30) days of the date of the invoice for such Products; Nexen will pay reasonable freight charges for the timely return of the erroneously shipped Products, and issue a credit to Buyer for the returned Products at the price Buyer paid for them, including any shipping expenses that Nexen charged Buyer. All shortages, overages and nonconformities not reported to Nexen as required by this section will be deemed waived.

Limitation on Actions

No action, regardless of form, arising out of any transaction to which these terms and conditions are applicable may be brought by the Buyer more than one year after the cause of action has accrued.

nexen[®]

Nexen Group, Inc.
560 Oak Grove Parkway
Vadnais Heights, MN 55127

800.843.7445
Fax: 651.286.1099
www.nexengroup.com

ISO 9001 Certified