

Tapered Bore Brake




**Models T-450, T-600, T-800, T-1000,
T-450A, T-600A, T-800A, and T-1000A**



In accordance with Nexen's established policy of constant product improvement, the specifications contained in this manual are subject to change without notice. Technical data listed in this manual are based on the latest information available at the time of printing and are also subject to change without notice.

Technical Support: 800-843-7445
(651) 484-5900

www.nexengroup.com

	<div data-bbox="555 579 850 636"> DANGER</div> <p>Read this manual carefully before installation and operation. Follow Nexen's instructions and integrate this unit into your system with care. This unit should be installed, operated and maintained by qualified personnel ONLY. Improper installation can damage your system, cause injury or death. Comply with all applicable codes.</p>	
---	---	---

This document is the original, non-translated, version.

Conformity Declaration: In accordance with Appendix II B of CE Machinery Directive (2006/42/EC):

A Declaration of Incorporation of Partly Completed Machinery evaluation for the applicable EU directives was carried out for this product in accordance with the Machinery Directive. The declaration of incorporation is set out in writing in a separate document and can be requested if required.

This machinery is incomplete and must not be put into service until the machinery into which it is to be incorporated has been declared in conformity with the applicable provisions of the Directive.

Nexen Group, Inc.
560 Oak Grove Parkway
Vadnais Heights, Minnesota 55127

ISO 9001 Certified

Copyright 2014 Nexen Group, Inc.


Table of Contents

General Specifications	4
General Safety Precautions	4
Installation	5
Brake Guard Installation	5
Lubrication	6
Air Connections	6
Auxiliary Cooling Air Connections	7
Operation	8
Brake Assembly	8
Trouble Shooting	8
Parts Replacement:	
Friction Facings	9
Bearings and O-Ring Seals	9
Replacement Parts	11
Accessories	12
Facing and Repair Kits	12
Warranty	13

GENERAL SPECIFICATIONS


Specifications	
Torque:	Up to 390 Nm (3450 in-lbs)
Actuation Pressure:	1 - 5.5 bar (14.5 - 80 psi)
Service Temperature:	4.5 - 104 C (40 - 220 F)
Approximate Weight:	Up to 20.4 kg (45 lbs)

GENERAL SAFETY PRECAUTIONS




CAUTION

Some product assemblies can exceed 45 lbs. Use lifting aids and proper lifting techniques when installing, removing, or placing in service.




CAUTION

Use appropriate guarding from applications using an output shaft. Failure to guard could result in serious bodily injury.




CAUTION

Watch for sharp features when interacting with this product. The parts have complex shapes and machined edges.




WARNING

This product is capable of emitting a spark if misused, therefore it is not recommended for use in any explosive environment.




WARNING


Ensure proper guarding of the product is used. Nexen recommends the machine builder design guarding in compliance with OSHA 29 CFR 1910 "Occupational Safety and Health Hazards".



CAUTION

The temperature limits for the product are 4.5-100 degree Celsius (40-220 degree F).

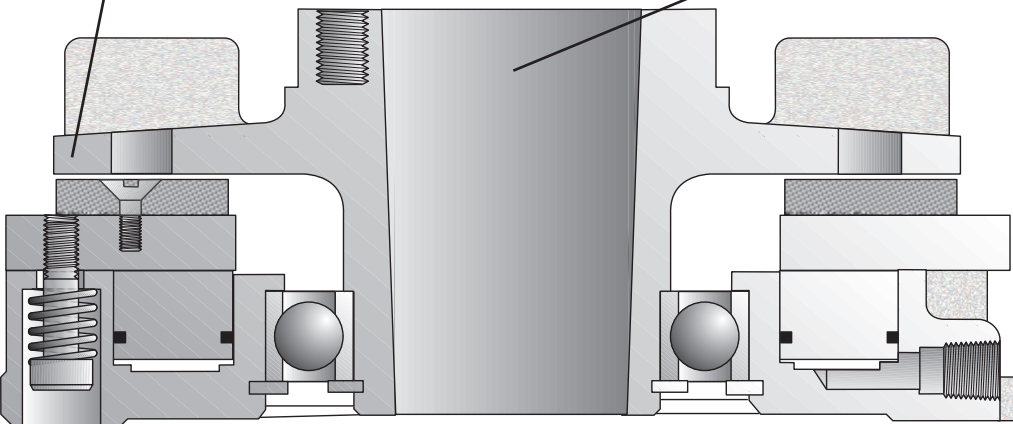



CAUTION

Use appropriate guarding from applications using an output shaft. Failure to guard could result in serious bodily injury.

INSTALLATION


NOTE: Refer to Figure 1.

1. Remove any dirt, grease, or foreign material from the Friction Disc Hub (Item 1) bore and the tapered surfaces of the Q.D. Bushing.

NOTE: Do not use lubricants when installing Q.D. Bushing.

NOTE: Do not strike Q.D. Bushing to force it into the bore of the Friction Disc Hub.

2. Slide Q.D. Bushing into the bore of the Friction Disc Hub (Item 1).

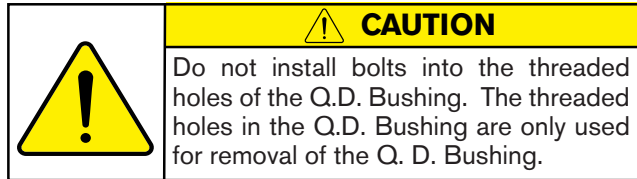

3. Insert cap screws into Q.D. Bushing, aligning them with the tapped holes in the Friction Disc Hub (Item 1).
4. Position Brake on the shaft.

NOTE: There should be an 1/8 - 1/4" gap between the Q.D. Bushing flange and the Friction Disc Hub after the cap screws have been tightened to the recommended torque.

Runout is minimized if a Dial Indicator is used as the Q.D. Bushing cap screws are tightened. Place contact tip of Dial Indicator on smooth surface of the Friction Disc Hub (Item 1) to measure runout. Runout on this surface must not exceed 0.005 TIR when cap screws are tightened.

5. Alternately and evenly tighten Q.D. Bushing cap screws to torque recommended in Table 1.

NOTE: Keep torque pin as short as possible.

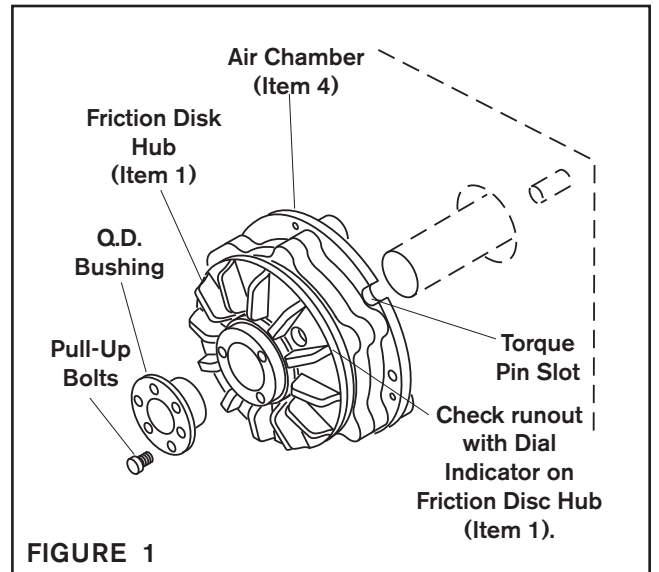
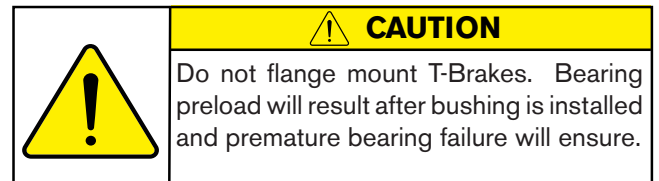



TABLE 1

Model	Bushing Type	Maximum Bore*	Pull-Up Bolt Tightening Torque
T-450	JA	1.000 in	5.0 ft-lbs [6.7 Nm]
T-450A			
T-600	SH	1.375 in	10.0 ft-lbs [13.5 Nm]
T-600A			
T-800	SK	2.125 in	15.0 ft-lbs [20.2 Nm]
T-800A			
T-1000	E	2.750 in	60.0 ft-lbs [81.0 Nm]
T-1000A			

*Standard depth Keyway


6. Secure the Air Chamber (Item 4) to prevent rotation and take up brake torque. A torque pin slot is provided in the Air Chamber.

BRAKE GUARD INSTALLATION

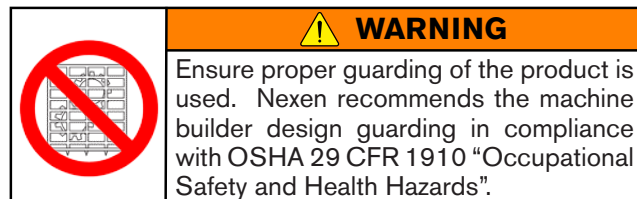

NOTE: Refer to Figure 2.

1. Align the mounting holes of the Brake Guard with the four tapped holes in the brake Air Chamber.
2. Using the four 10-24 X 1/2 Phillips Head Pan Screws, secure the Brake Guard to the T Brake. Tighten screws to 35 in-lbs [4 Nm].

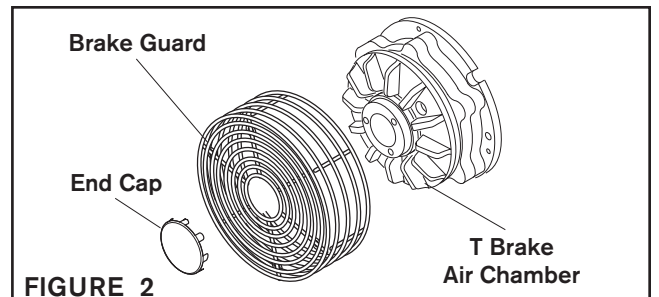

3. If the Brake Guard is shipped with an End Cap, place the End Cap over the front of the Brake Guard and bend the tabs around the Brake Guard to hold the End Cap in place.

LUBRICATION

NOTE

Nexen pneumatically actuated devices require clean, pressure regulated air for maximum performance and life. All seals in Nexen pneumatically operated devices are lubricated for life, and do not require additional lubrication.

However, some customers prefer to use an air line lubricator, which injects oil into the pressurized air, forcing an oil mist into the air chamber. This is acceptable, but care must be taken to ensure once an air mist lubrication system is used, it is continually used over the life of the product as the oil mist may wash free the factory installed lubrication.

Locate the lubricator above and within ten feet of the product, and use low viscosity oil such as SAE-10.

Synthetic lubricants are not recommended.

Nexen product's bearings are shielded and pre-lubricated, and require no further lubrication.

LUBRICATOR DRIP RATE SETTINGS



CAUTION

These settings are for Nexen supplied lubricators. If you are not using a Nexen lubricator, calibration must follow the manufacturer's suggested procedure.

1. Close and disconnect the air line from the unit.
2. Turn the Lubricator Adjustment Knob counterclockwise three complete turns.
3. Open the air line.
4. Close the air line to the unit when a drop of oil forms in the Lubricator Sight Gage.
5. Connect the air line to the unit.
6. Turn the Lubricator Adjustment Knob clockwise until closed.
7. Turn the Lubricator Adjustment Knob counterclockwise one-third turn.
8. Open the air line to the unit.

AIR CONNECTIONS

All Nexen pneumatically actuated devices require clean and dry air, which meet or exceeds ISO 8573.1:2001 Class 4.4.3 quality.

NOTE


For quick response, Nexen recommends a quick exhaust valve and short air lines between the Control Valves and the unit. Align the air inlet ports to a down position to allow condensation to drain out of the air chambers of the product.



CAUTION

Low air pressure will cause slippage and overheating. Excessive air pressure will cause abrupt starts and stops, reducing product life.

The following is a common air supply scheme used with this product. This is an example and not an all-inclusive list. All air circuits to be used with this product must be designed following ISO-4414 guidelines.

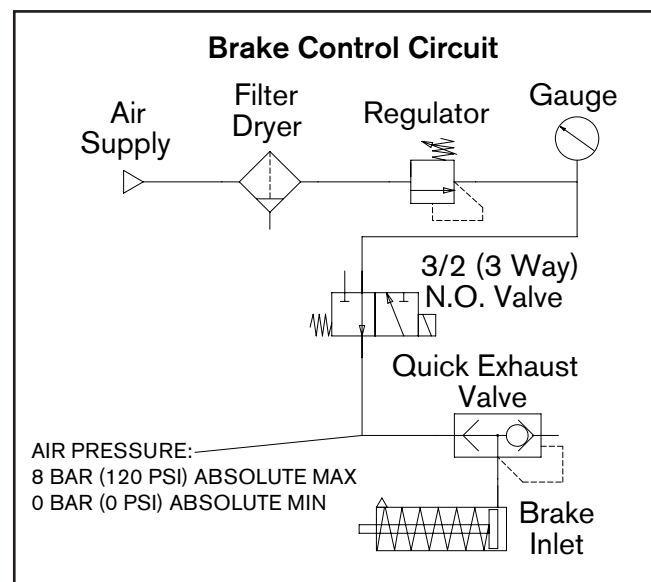

AUXILIARY COOLING AIR CONNECTIONS

NOTE: The auxiliary cooling option is not a standard feature. It is a passage through which compressed air can flow for increased thermal capacity. If you desire this feature or are replacing a brake that has this feature please contact Nexen at 800-843-7445.

NOTE: Do not use rigid pipe or tubing when making air line connections.

A 10-32 tapped hole in the piston plate allows auxiliary cooling of the brake's friction surface (see Figure 3). Auxiliary cooling increases the brake's thermal capacity approximately 0.1 HP_t per 100 SCFH of cooling air over the brake's rated thermal horsepower at any RPM (see Table 2).

EXAMPLE: A T-1000 develops 1.0 HP_t at 200 RPM. Referring to Table 2, 80 psi of cooling air increases the HP_t 0.4 (400 SCFH/100 x 0.1). **RESULT:** Total HP_t is 1.0+0.4=1.4 HP_t.

NOTE: Use non-lubricated air tapped off the air line ahead of the lubricator.

Hose assembly part number is 857000.

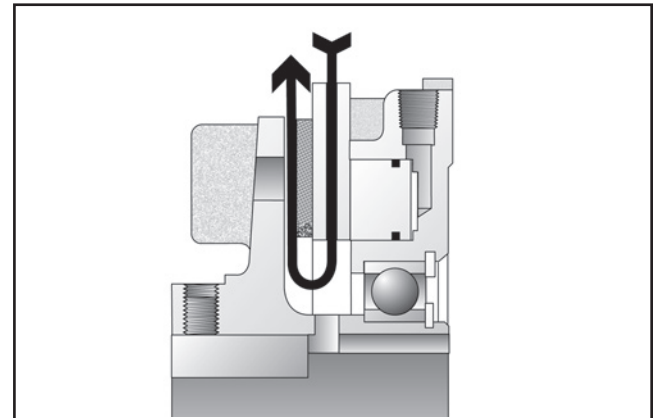


FIGURE 3

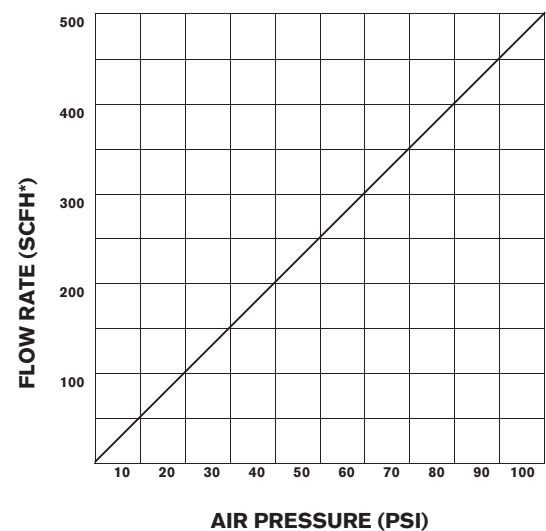


TABLE 2 *Standard Cubic Feet per Hour

OPERATION

	WARNING
Never exceed maximum operating speeds listed for your product. (See Table 3).	

	CAUTION
Never exceed life of facing material. Facing life depends on the volume of material and the total energy over the life of the unit. Expected life (in hrs) can be found by: Time=Volume/(Power*Wear Rate).	

TABLE 3

Sizes	Max RPM
T-450 - T-1000	1800*
T-450A	4,500
T-600A	4,000
T-800A	3,500
T-1000A	3,000

*Consult Nexen for high speed applications.

	CAUTION
The temperature limits for this product line are 4.5-100 Degree Celsius (40-220 Degree F).	

BRAKE ASSEMBLY

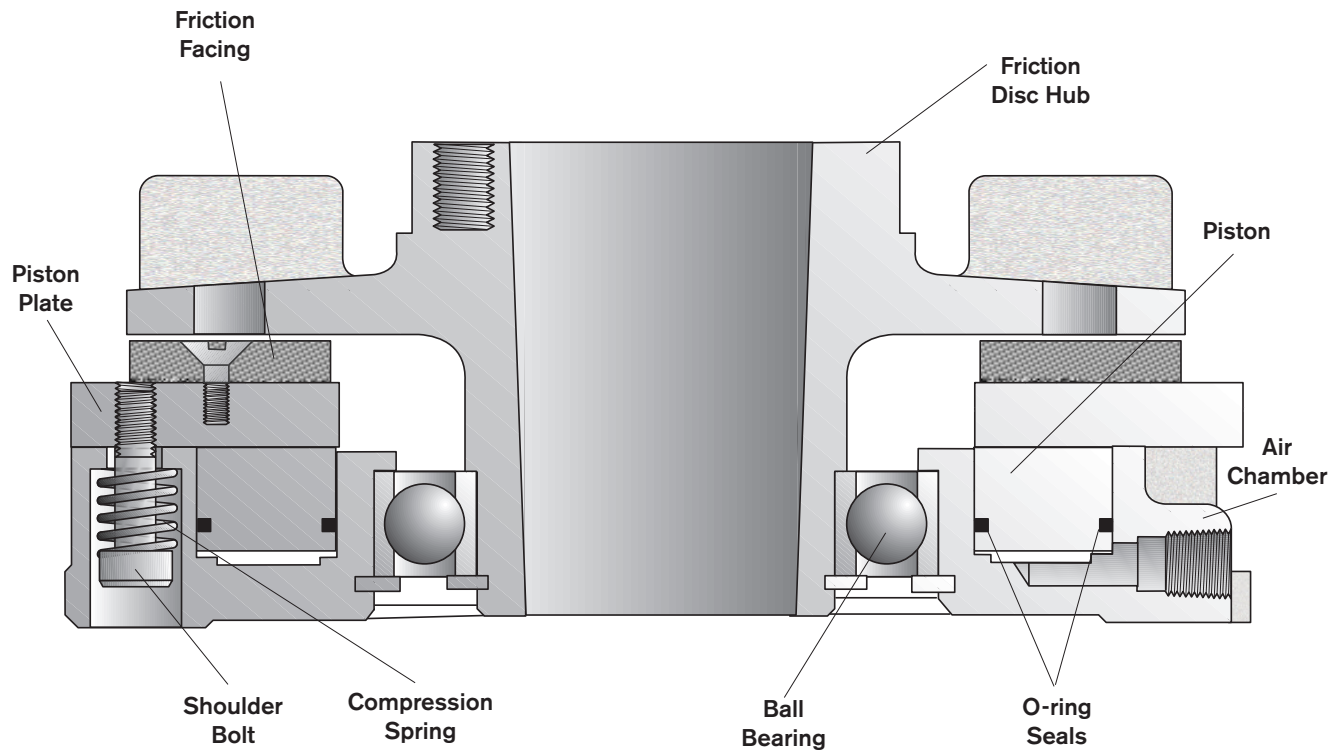


FIGURE 4

TROUBLESHOOTING

Symptom	Probable Cause	Solution
Failure to engage	Low or lack of air pressure	Replace the control valve.
	Internal contamination or corrosion	Align the exhaust port to the six o'clock down position to allow condensation to drain out of the exhaust port.
Failure to disengage	Broken Compression Springs	Replace the Compression Springs.
	Air not being exhausted due to a control valve malfunction	Check for control valve malfunction and replace it if necessary.
		Check for air leaks in the air lines and around the O-rings Seals. Replace the air lines or O-ring Seals if necessary.
	Internal contamination or corrosion	Align the exhaust port to the six o'clock down position to allow condensation to drain out of the exhaust port.
Loss of torque	Worn or dirty Friction Facings	Replace the Friction Facings.

PARTS REPLACEMENT

FRICTION FACINGS

NOTE: Refer to Figure 5.

1. Align the holes in the Friction Disc Hub (Item 1) with the Machine Screws (Item 14) holding the split Friction Facing (Item 5).
2. Remove the old Machine Screws (Item 14).
3. Remove the old split Friction Facings (Item 5).
4. Install the new split Friction Facings (Item 5).
5. Secure the new split Friction Facings (Item 5) using the new Machine Screws with locking patch (Item 14).
6. Tighten the new Machine Screws to the recommended torque (See Table 4).

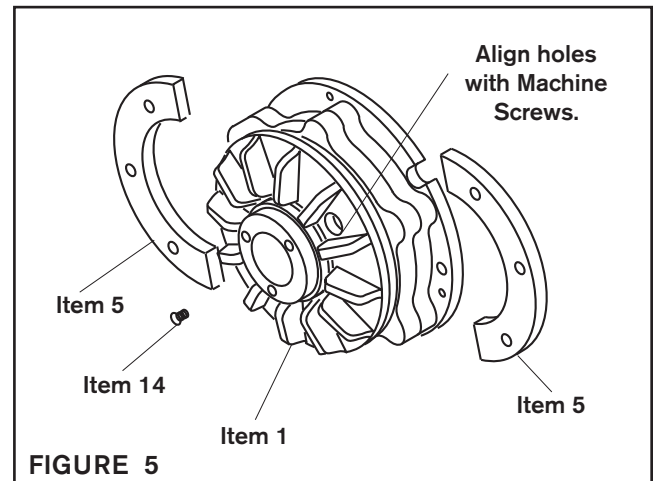


TABLE 4

Model	Tightening Torques
T-450	19 in-lb [2.1 Nm]
T-450A	
T-600	
T-600A	
T-800	60 in-lb [6.8 Nm]
T-800A	
T-1000	
T-1000A	

BEARING AND O-RING SEALS

NOTE: Refer to Figure 6.

	CAUTION
	Working with spring or tension loaded fasteners and devices can cause injury. Wear safety glasses and take the appropriate safety precautions.

1. Remove the Retaining Ring (Item 9).
2. Press the Friction Disc Hub (Item 1) out of the Ball Bearing (Item 8).
3. Remove the Retaining Ring (Item 10).
4. Press the old Ball Bearing (Item 8) out of the Air Chamber (Item 4).
5. Alternately and evenly remove the three old Shoulder Bolts (Item 6) and Compression Springs (Item 7).
6. Separate the Piston Plate (Item 3) and split Friction Facing (Item 5) from the Air Chamber (Item 4).
7. Remove the Piston (Item 2) from the Air Chamber (Item 4).

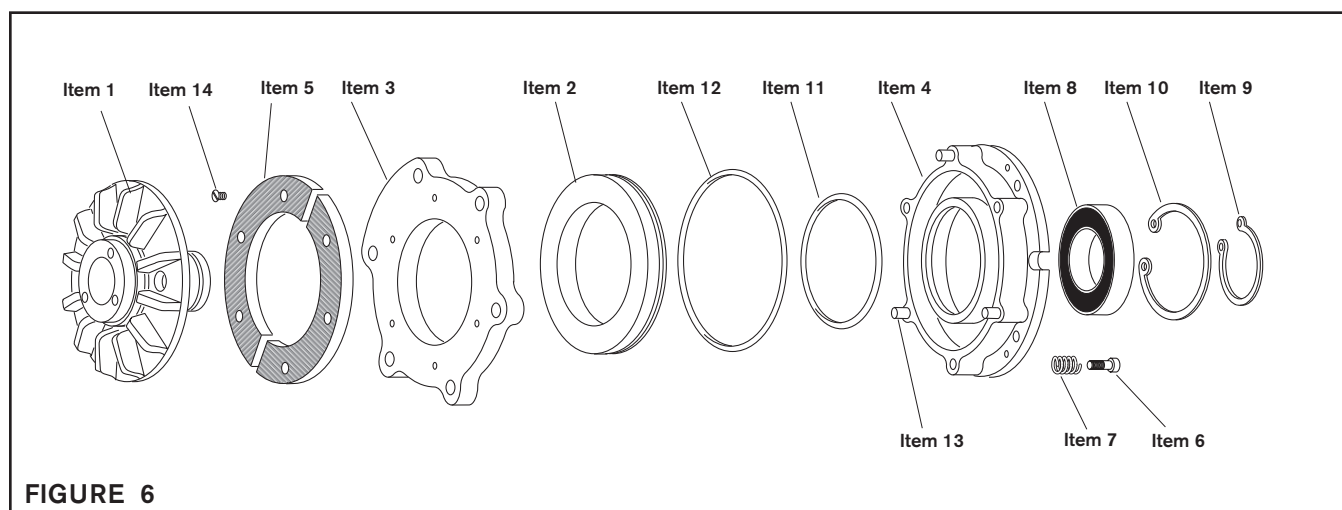


FIGURE 6

8. Remove the old O-ring Seals (Items 11 and 12) from the Piston (Item 2).
9. Clean the bearing bore of the Air Chamber (Item 4) with solvent to remove all old Loctite® residue.
10. Apply an adequate amount of Loctite® 680 to evenly coat the outer diameter of the new Ball Bearing (Item 8) and press the new Ball Bearing into the Air Chamber (Item 4).
11. Reinstall the Retaining Ring (Item 10).
12. Clean the O-ring grooves of the Piston (Item 2) and O-ring contact surfaces of the Air Chamber (Item 4); then, lubricate the new O-ring Seals (Item 11 and 12) and the O-ring grooves and contact surfaces of the Piston and Air Chamber with a thin film of fresh O-ring lubricant.
13. Install the new O-ring Seals (Items 11 and 12) onto the Piston (Item 2).
14. Slide the Piston (Item 2) into the Air Chamber (Item 4).
15. Align the pins on the Air Chamber (Item 4) with the holes in the Piston Plate (Item 3) and slide the Piston Plate and split Friction Facing (Item 5) onto the Air Chamber.
16. Clamp the Piston Plate (Item 3) and Air Chamber (Item 4) together with C-clamps.
17. Apply Loctite® 242 to the threads of the three new Shoulder Bolts (Item 6) and install the new Shoulder Bolts and new Compression Springs (Item 7).
18. Alternately and evenly tighten the three new Shoulder Bolts (Item 6) to the recommended torque (See Table 5).
19. Remove the C-clamps.
20. Supporting the inner race of the Ball Bearing (Item 8), press the Friction Disc Hub (Item 1) into the Ball Bearing.
21. Reinstall the Retaining Ring (Item 9).

NOTE: Avoid pinching the O-ring Seals when assembling the Piston and Air Chamber.


TABLE 5

Model	Bolt Size	Tightening Torques
T-450	0.190-24	46.0 in-lb [5.2 Nm]
T-450A		
T-600	0.312-18	245.0 in-lb [27.7 Nm]
T-600A		
T-800	0.312-18	245.0 in-lb [27.7 Nm]
T-800A		
T-1000	0.312-18	245.0 in-lb [27.7 Nm]
T-1000A		

REPLACEMENT PARTS

The item or balloon number for all Nexen products is used for part identification on all product parts lists, product price lists, unit assembly drawings, bills of materials, and instruction manuals.

When ordering replacement parts, specify model designation, item number, part description, and quantity. Purchase replacement parts through your local Nexen Distributor.

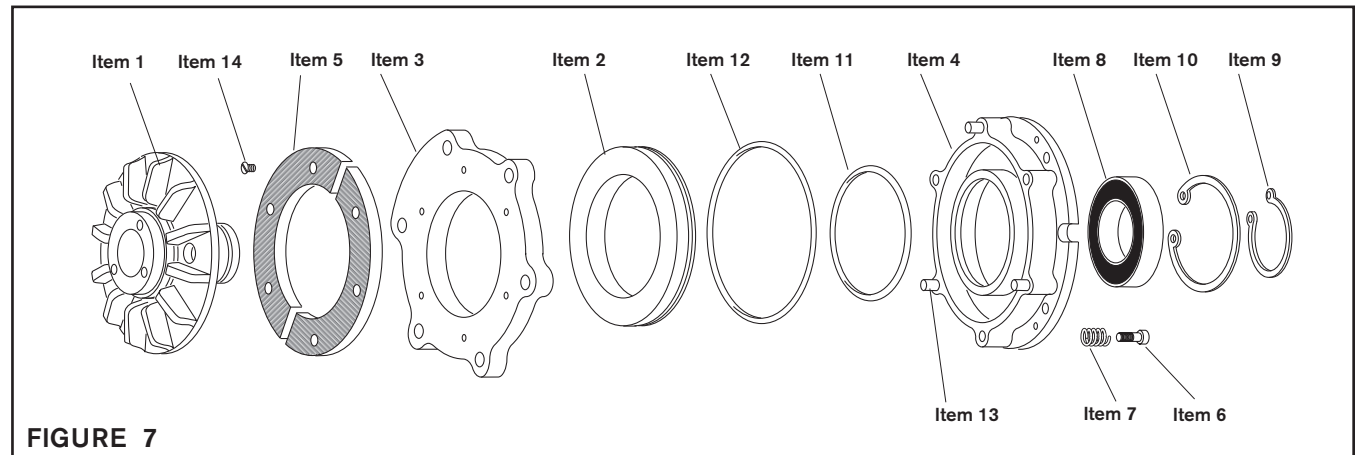

ITEM	DESCRIPTION	QTY
1	Friction Disc Hub	1
2	Piston	1
3	Piston Plate	1
4 ³	Air Chamber	1
5 ²	Friction Facing	1
6 ¹	Shoulder Bolt	3
7 ¹	Compression Spring	3

¹ Denotes Repair Kit items.

² Denotes Facing Kit items.

³ Order Air Chamber Assembly in place of the Air Chamber (Item 4) and Dowel Pin (Item 13) (See Table 6).

ITEM	DESCRIPTION	QTY
8 ¹	Ball Bearing	1
9	Retaining Ring	1
10	Retaining Ring	1
11 ¹	O-ring Seal	1
12 ¹	O-ring Seal	1
13 ³	Dowel Pin	3
14 ²	Machine Screw	6

TABLE 6

Model	Air Chamber Assembly
T-450	Prod. No. 12232
T-450A	
T-600	Prod. No. 12233
T-600A	
T-800	Prod. No. 12234
T-800A	
T-1000	Prod. No. 12235
T-1000A	

ACCESSORIES

TABLE 7
Product Numbers

Model	Torque Pin Bracket	Brake Guard
T-450	819900	817700
T-450A		
T-600	821400	818300
T-600A		
T-800	823400	826300
T-800A		
T-1000	825500	828200
T-1000A		

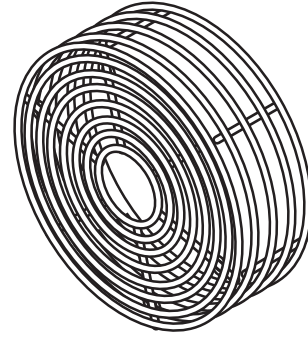


FIGURE 8
Brake Guard

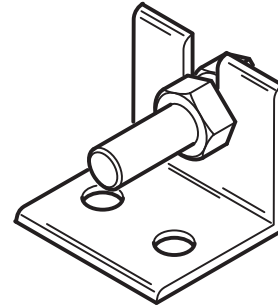



FIGURE 9
Torque Pin Bracket

FACING AND REPAIR KITS

TABLE 8
Product Numbers

Model	LoCo Facing Kit	Standard Facing Kit	HiCo Facing Kit	Repair Kit
T-450	818972	818971	818974	818910
T-600	820572	820571	820574	820510
T-800	827472	827471	827474	827410
T-1000	827572	827571	827574	827510
T-450A	818972	818971	818974	818903
T-600A	820572	820571	820574	820503
T-800A	827472	827471	827474	827402
T-1000A	827572	827571	827574	827502

NOTE: Before ordering new friction facings, determine if your brake uses low coefficient (LoCo), standard or high coefficient (HiCo) friction facings (Consult the color code chart in Figure 10) Do not change friction facing type without consulting Nexen.

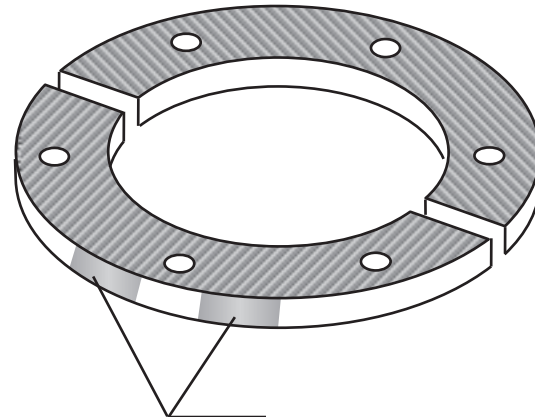

Facing Color Code

Figure 10
Facing Type

Green: Low Coefficient (LoCo)
Red: Standard
Purple: High Coefficient (HiCo)

WARRANTY

Warranties

Nexen warrants that the Products will (a) be free from any defects in material or workmanship for a period of 12 months from the date of shipment, and (b) will meet and perform in accordance with the specifications in any engineering drawing specifically for the Product that is in Nexen's current product catalogue, or that is accessible at the Nexen website, or that is attached to this Quotation and that specifically refers to this Quotation by its number, subject in all cases to any limitations and exclusions set out in the drawing. NEXEN MAKES NO OTHER WARRANTY, EXPRESS OR IMPLIED, AND ALL IMPLIED WARRANTIES, INCLUDING WITHOUT LIMITATION, IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE HEREBY DISCLAIMED. This warranty applies only if: (a) the Product has been installed, used and maintained in accordance with any applicable Nexen installation or maintenance manual for the Product; (b) the alleged defect is not attributable to normal wear and tear; (c) the Product has not been altered, misused or used for purposes other than those for which it was intended; and (d) Buyer has given written notice of the alleged defect to Nexen, and delivered the allegedly defective Product to Nexen, within one year of the date of shipment.

Exclusive Remedy

The exclusive remedy for the Buyer for any breach of any warranties provided in connection with this agreement will be, at the election of Nexen: (a) repair or replacement with new, serviceably used, or reconditioned parts or products; or (b) issuance of credit in the amount of the purchase price paid to Nexen by the Buyer for the Products.

Agent's Authority

Buyer agrees that no agent, employee or representative of Nexen has authority to bind Nexen to any affirmation, representation, or warranty concerning the Products other than those warranties expressly set forth herein.

Limitation on Nexen's Liability

TO THE EXTENT PERMITTED BY LAW NEXEN SHALL HAVE NO LIABILITY TO BUYER OR ANY OTHER PERSON FOR INCIDENTAL DAMAGES, SPECIAL DAMAGES, CONSEQUENTIAL DAMAGES OR OTHER DAMAGES OF ANY KIND OR NATURE WHATSOEVER, WHETHER ARISING OUT OF BREACH OF WARRANTY OR OTHER BREACH OF CONTRACT, NEGLIGENCE OR OTHER TORT, OR OTHERWISE, EVEN IF NEXEN SHALL HAVE BEEN ADVISED OF THE POSSIBILITY OR LIKELIHOOD OF SUCH POTENTIAL LOSS OR DAMAGE. For all of the purposes hereof, the term "consequential damages" shall include lost profits, penalties, delay damages, liquidated damages or other damages and liabilities which Buyer shall be obligated to pay or which Buyer may incur based upon, related to or arising out of its contracts with its customers or other third parties. In no event shall Nexen be liable for any amount of damages in excess of amounts paid by Buyer for Products or services as to which a breach of contract has been determined to exist. The parties expressly agree that the price for the Products and the services was determined in consideration of the limitation on damages set forth herein and such limitation has been specifically bargained for and constitutes an agreed allocation of risk which shall survive the determination of any court of competent jurisdiction that any remedy herein fails of its essential purpose.

Inspection

Buyer shall inspect all shipments of Products upon arrival and shall notify Nexen in writing, of any shortages or other failures to conform to these terms and conditions which are reasonably discoverable upon arrival without opening any carton or box in which the Products are contained. Such notice shall be sent within 14 days following arrival. All notifications shall be accompanied by packing slips, inspection reports and other documents necessary to support Buyer's claims. In addition to the foregoing obligations, in the event that Buyer receives Products that Buyer did not order, Buyer shall return the erroneously shipped Products to Nexen within thirty (30) days of the date of the invoice for such Products; Nexen will pay reasonable freight charges for the timely return of the erroneously shipped Products, and issue a credit to Buyer for the returned Products at the price Buyer paid for them, including any shipping expenses that Nexen charged Buyer. All shortages, overages and nonconformities not reported to Nexen as required by this section will be deemed waived.

Limitation on Actions

No action, regardless of form, arising out of any transaction to which these terms and conditions are applicable may be brought by the Buyer more than one year after the cause of action has accrued.

nexen®

Nexen Group, Inc.
560 Oak Grove Parkway
Vadnais Heights, MN 55127

800.843.7445
Fax: 651.286.1099
www.nexengroup.com

ISO 9001 Certified